


### ESPRESSO COFFEE GRINDER

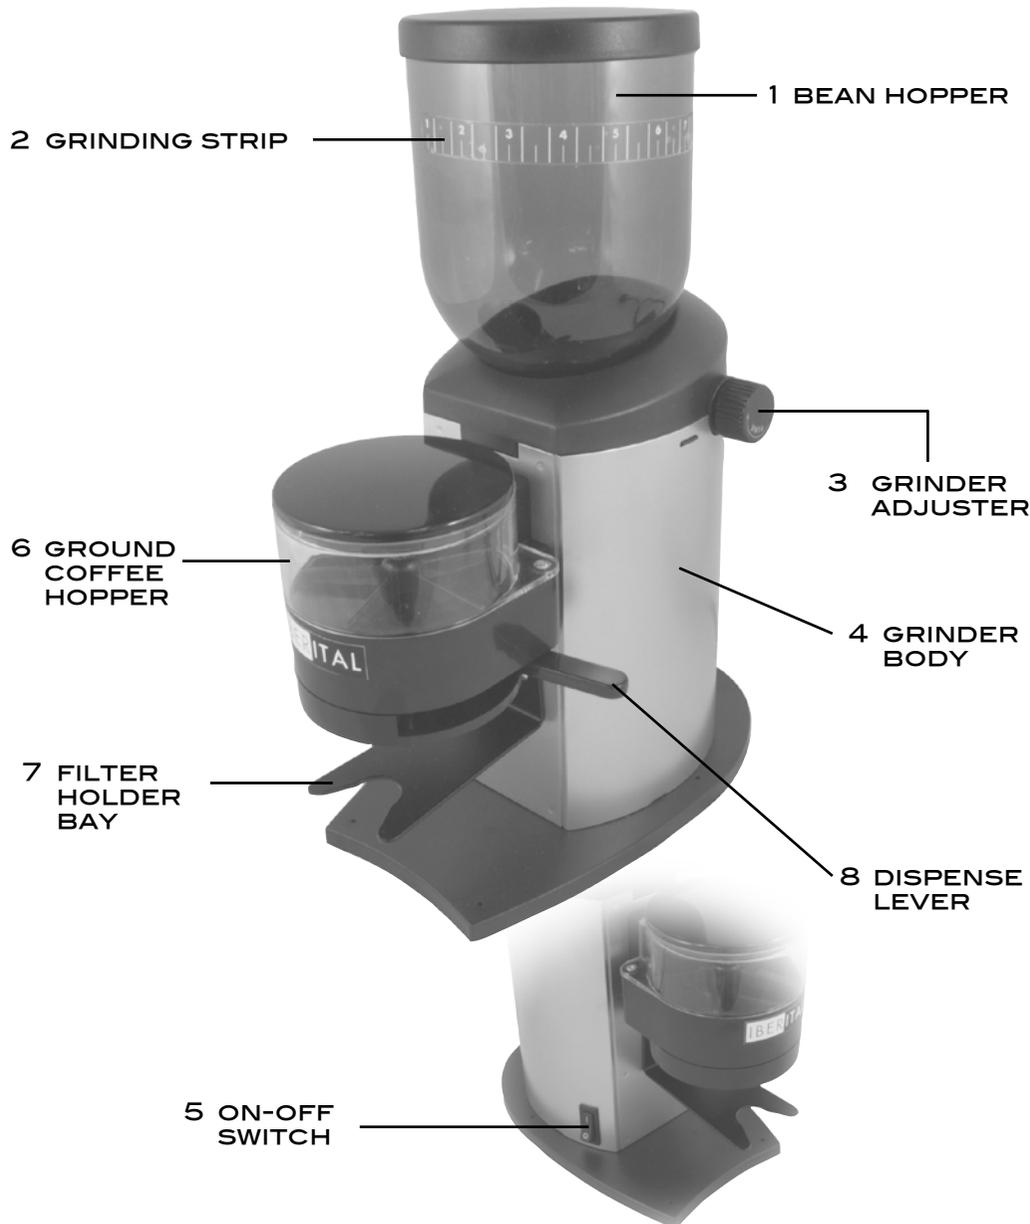

#### Before using

Please read the information below very carefully. It contains important tips for the use, safety and the maintenance/care of this appliance.

#### General Information

- Do not plug the appliance in before checking that the voltage indicated on the rating plate is the same as the mains electricity supply voltage.
- Clean the appliance with a dry or slightly damp cloth only.
- Repairs are to be performed only by authorized service offices. Inexpertly repaired appliances are a source of risk to the user.
- IBERITAL UK will not accept any liability for damage or injury if the appliance is used other than for its intended purpose or is improperly operated or inexpertly repaired. All guarantee claims will be void.

#### Safety Information

- Do not use the appliance if the power cable is defective.
- Never remove the plug from the power supply socket with wet hands, or by pulling the on the power supply cord.
- Children cannot always recognize the dangers of using electrical equipment. Therefore, never leave them alone and unsupervised with electrical appliances.

**If the appliance has been filled with coffee beans, the grinding control must only be operated when the motor is running.**

**IMPORTANT: This appliance must NOT be used without hopper and lid firmly in place.**

#### Initial Operation/Assembly

The Iberital Gourmet Grinder comes factory Preset for espresso machine use. Take the bean hopper (1) and place in the grinder body (4), ensuring that the number 4 on the grading strip (2) is in the middle of the machine, facing front.

Fill the hopper with beans, connect to the mains and turn the machine on (5). Allow the machine to run until all the compartments in the ground coffee hopper (6) are completely covered. If they are not full, then a full dose of ground coffee will not be dispensed.

Offer up the filter holder to the machine (7) and pull the dispensing lever (8) forward to dispense one dose of ground coffee (7 grams).

#### Adjusting The Grind

To obtain a finer grind turn the grinder blade adjustment knob (3) clockwise towards a higher number, and for a courser grind turn anti-clockwise towards a lower number. The hopper will turn indicating adjustment.

#### Important Instructions

The Iberital coffee grinder is preset to the espresso grinding position. Always keep the lid of the bean container (1) tightly shut in order to enjoy the full taste and aroma of your coffee beans. Never grind more coffee than you actually need.

#### Cleaning The Grinding Gear

Disconnect the mains plug from the socket outlet. Remove any remaining beans in the container. Then remove the bean hopper (1) from the grinder body (2) - hold with both hands and gently ease it straight out. Brush both the hopper and the grinding chamber with a soft, dry brush to remove old beans.

#### **WARNING: This Appliance Must Be Earthed**

If the moulded-on plug has been removed proceed as follows: Connect the green and yellow wire to the terminal in the plug marked 'E' (Earth) or by the earth symbol  or coloured green or coloured green and yellow. Connect the blue wire to the terminal marked 'N' (Neutral) or coloured black. Connect the brown wire to the terminal marked 'L' (Live) or coloured red.